



How to Make a Storm Drain Net

Designed by Peggy Hentz, Red Creek Wildlife Center

Presented by Suzanne DeArment




Storm Drain Net

- Materials:
 - ½ inch PEX tubing-5 or 10 Feet (depending on how many you are making)
 - 5 ft. driveway marker
 - Mesh Laundry bag for 2 loads
 - Mesh pop-up Hamper
 - Strong duct tape




Cut the PEX Pipe

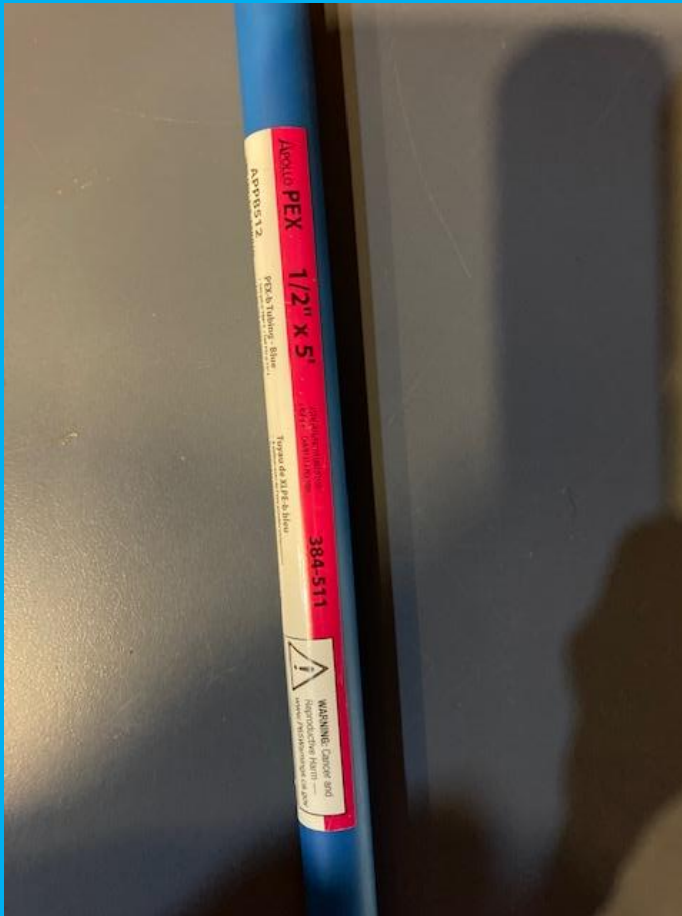


Measure 42-43" from the end of the PEX and cut it with a PVC pipe cutter.




Removing the Wire from the Hamper

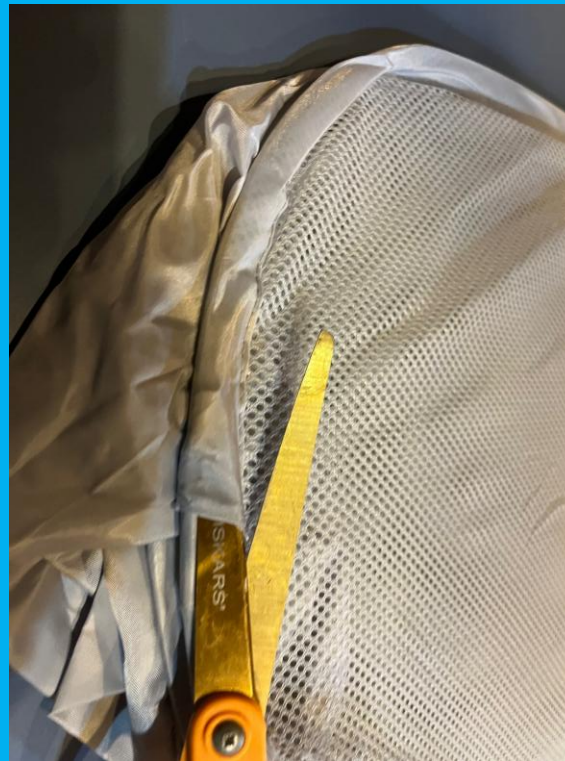

Pulling Wire Through the Mesh Netting

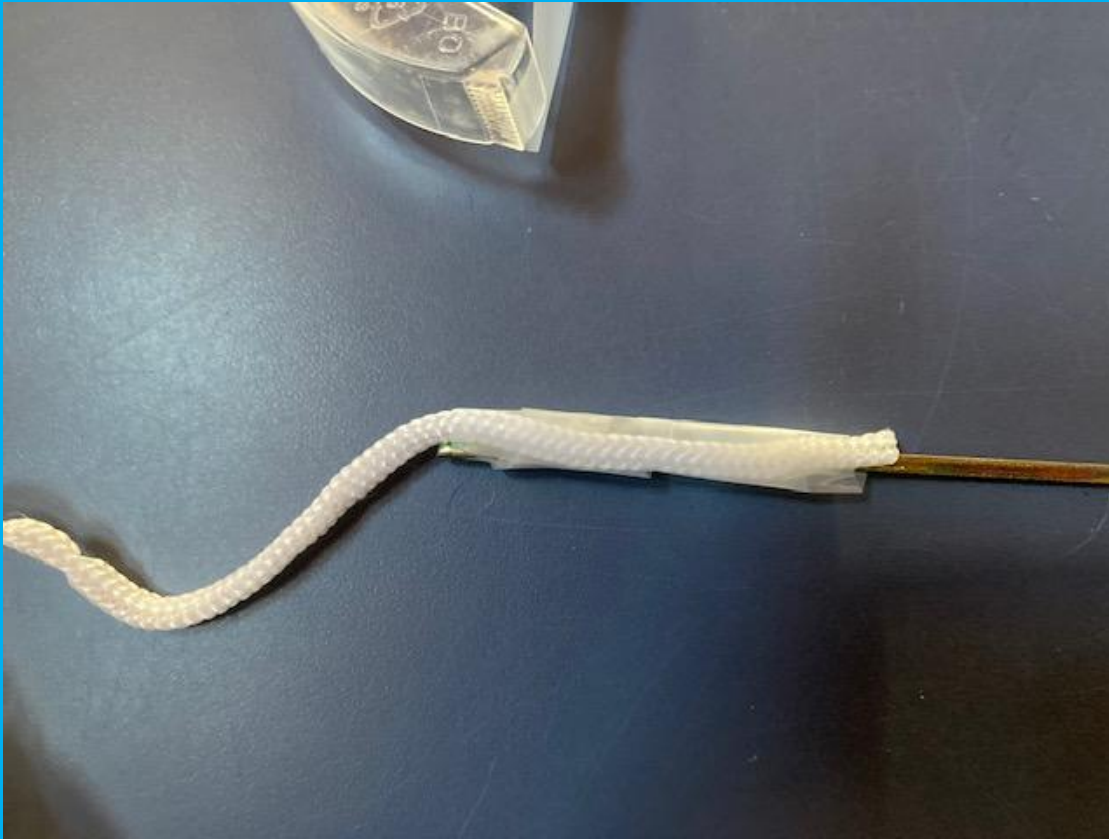


Mark PEX Pipe and Temporarily Tape Wire to Pipe

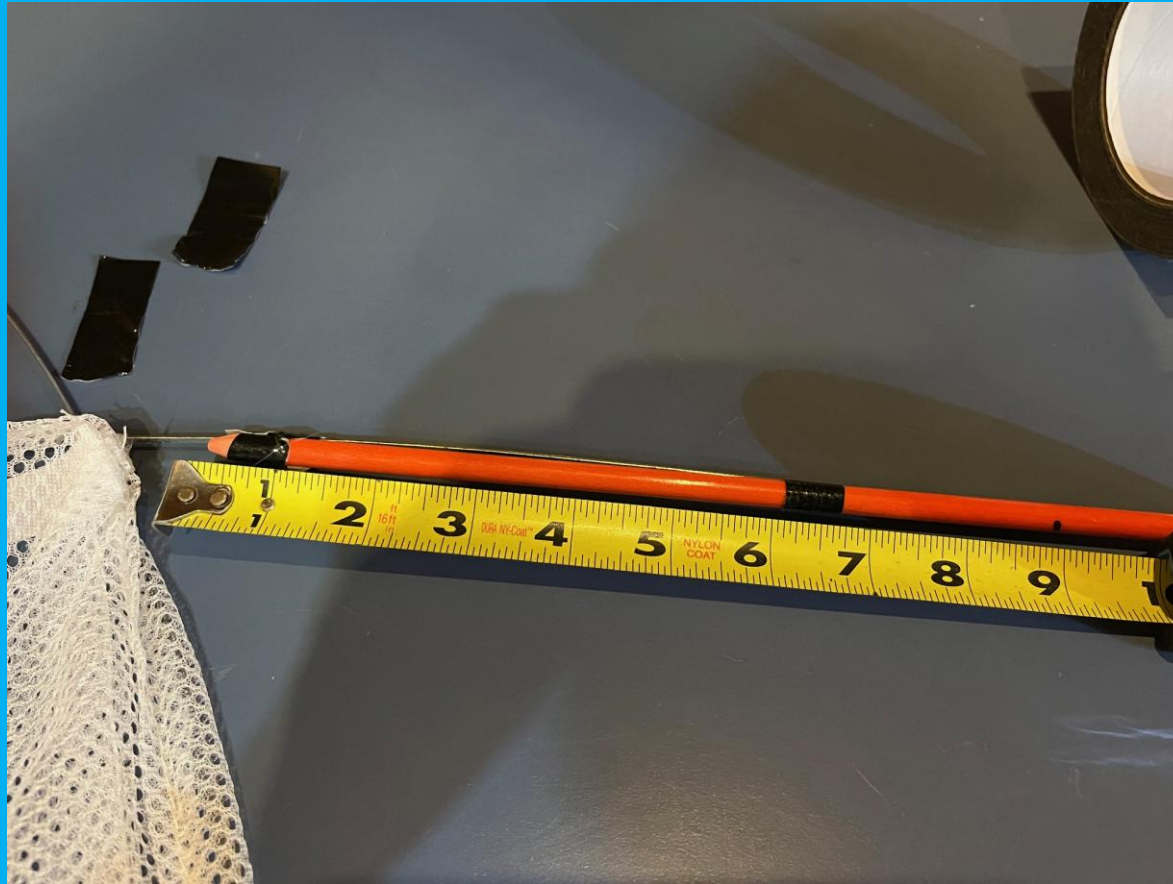

Slide PEX Pipe Over Driveway Marker



Check Positioning

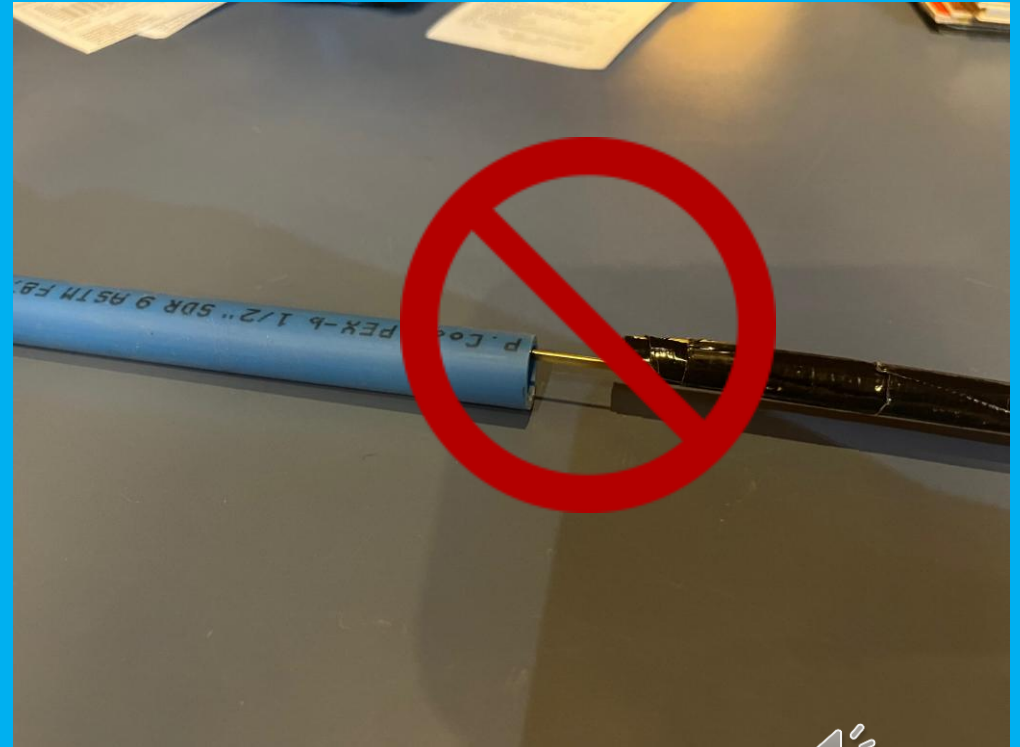



Positioning

- Correct positioning:
 - Remove temporary tape from Pipe
 - Slide pipe off of Driveway marker


- Incorrect positioning:
 - Re-adjust the length of the wire evenly on both the pipe and driveway marker
 - Temporarily tape the wire
 - Pull the driveway marker to make sure it does not extend past the end of the pipe.





Taping Wire to Driveway Marker

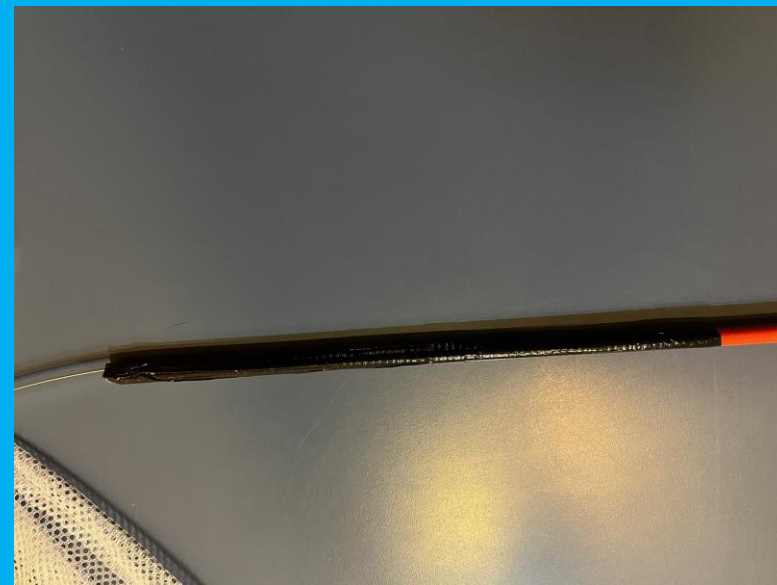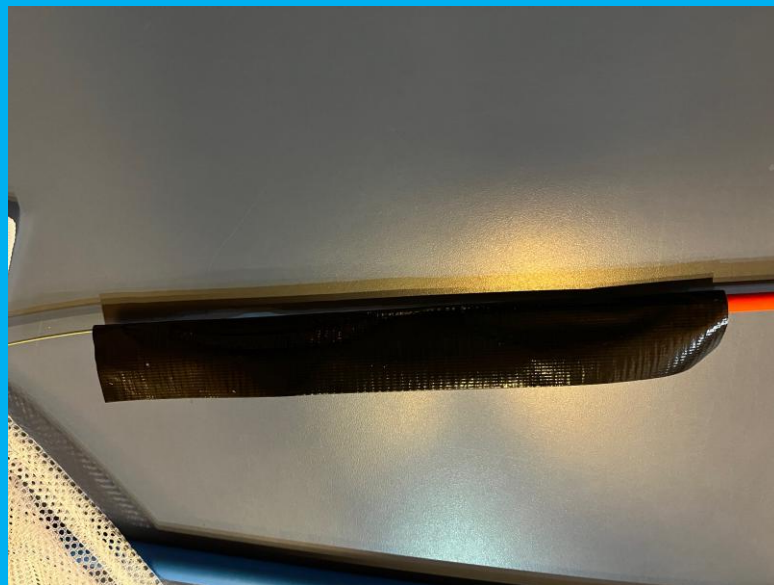

Slide PEX Pipe Over Driveway Marker

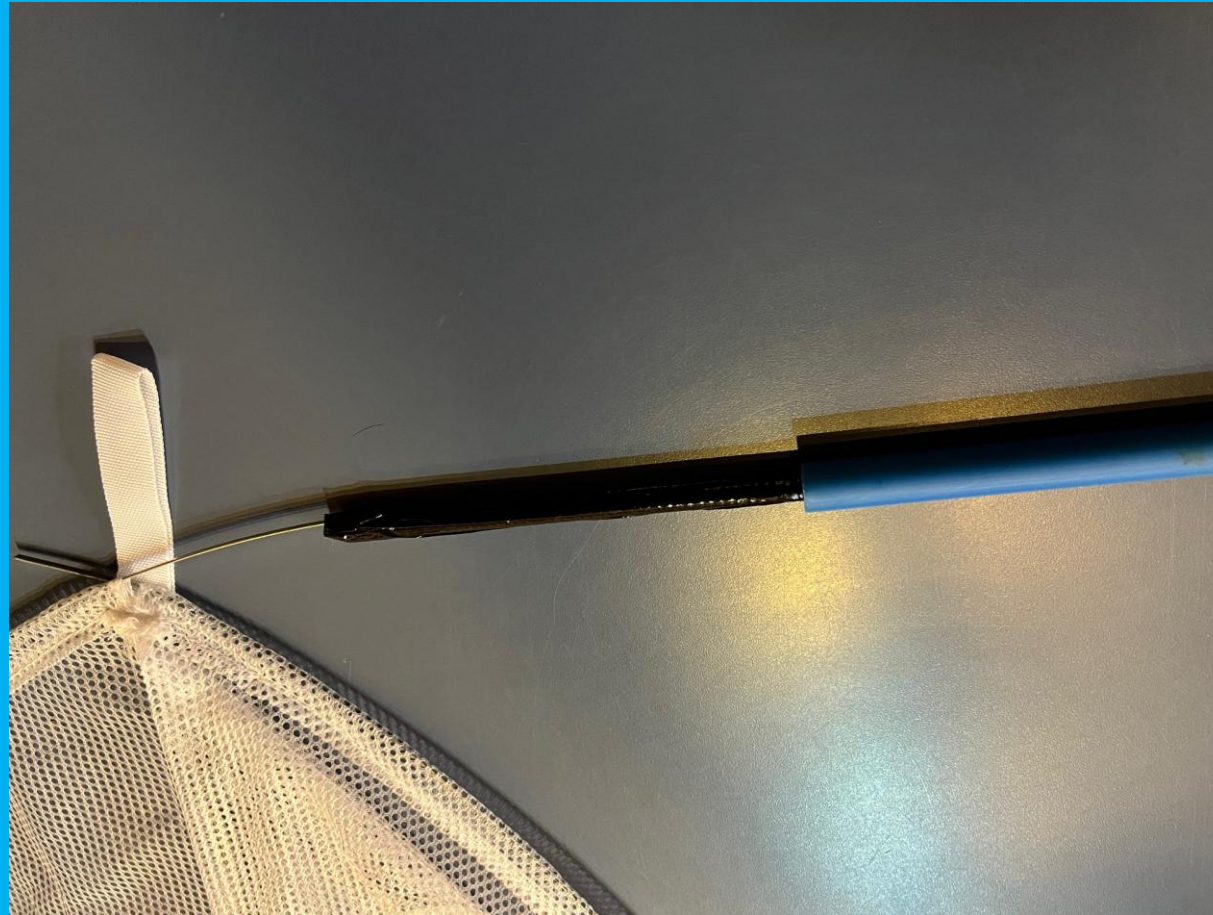

Tape Mesh Strap and Wire to PEX Pipe`

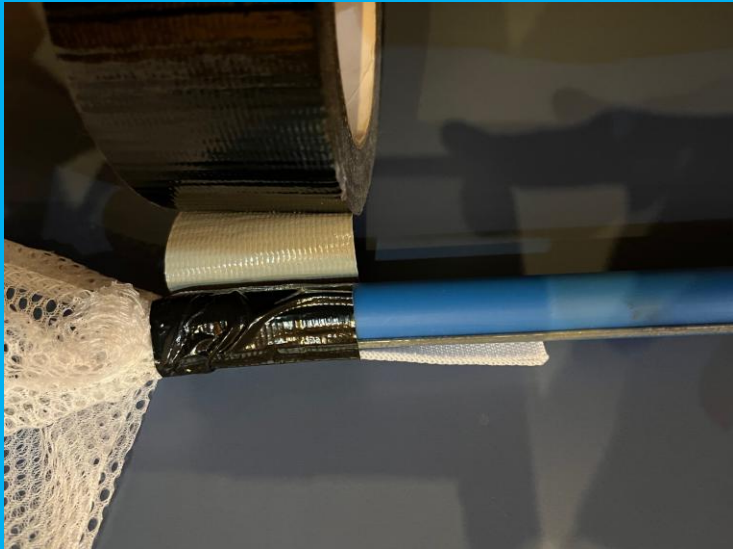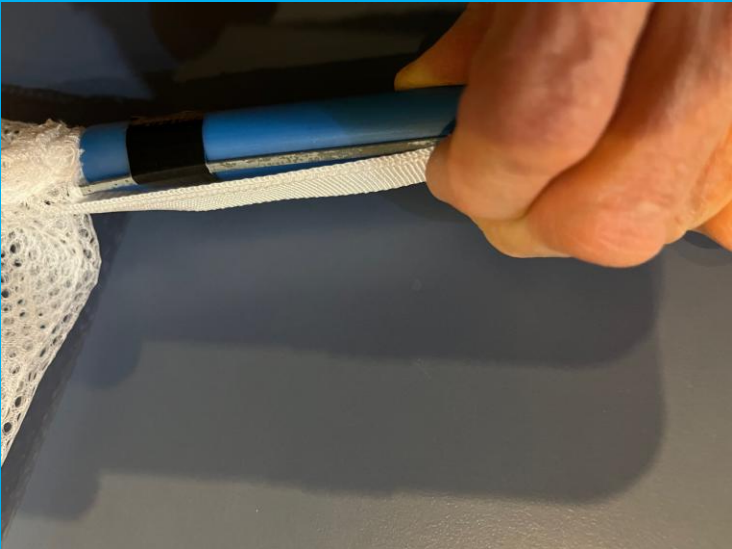

Finished Storm Drain Net

To protect net
cover it with a pillowcase

